

TRIGA Life Safety Systems, LLC

7600 Olde Eight Rd, Hudson, Ohio, 44236-1057 Tel: +1 330-577-5199, Email: info@trigaglobal.com

The TR-ACB cabinet provides mounting space for two Triga multi-modules.


NOTE: Installation and wiring of this device must be done in accordance with NFPA 72 and local ordinances.

1 Specifications

- Mounting: surface
- Dimensions: 12.5" W x 15.25"H x 3.0"D (31.8cm W x 38.7cm H x 7.6cm D)
- Weight: 6.25lbs (2.8kg)

2 Mounting

Mount the TR-ACB using the four mounting holes as shown below in a dry, indoor location.

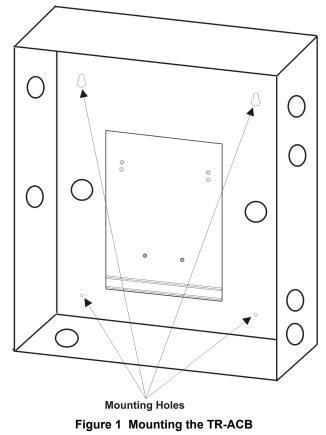

Scan the QR Code or enter the URL for supporting documentation.



www.trigaglobal.com

TR-ACB Product Installation Document

PN LS10300-002TR-E:A 2/22/2021 ECN: 151608

3 Installing Modules

The mounting process for Triga multi-modules is described below. All mounting hardware is included with Triga multi-modules.

To install Triga Multi-Modules in the TR-ACB

1. Insert the extended lip of the module into the rear slot on the mounting plate. Figure 2 illustrates steps 1 through 3.

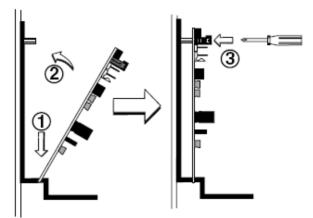


Figure 2 Installing the First Triga Multi-Module

- 2. Carefully swing the lower edge of the board toward the back of the cabinet until it touches the two standoffs.
- 3. Go to step 5 if you are mounting a second module into the TR-ACB. If mounting only one module, align two 4-40 screws with the two standoffs and tighten.
- 4. Address and wire the module as described in the compatible fire alarm control panel installation manual.
- 5. Align the long standoffs with the short standoffs and tighten.
- 6. Insert the lip of the second module board into the front slot on the mounting plate. Figure 3 illustrates steps 6 through 8.

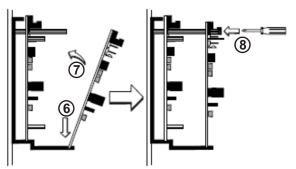


Figure 3 Installing the Second Triga Multi-Module

- 7. Carefully swing the module board toward the back of the cabinet until it touches the 1.25" (31.75 mm) standoffs installed on the rear module.
- 8. Align two 4-40 screws with the two standoffs and tighten.
- 9. Address and wire the module as described in the compatible fire alarm control panel installation manual.