

#### TRIGA Life Safety Systems, LLC

7600 Olde Eight Rd, Hudson, Ohio, 44236-1057 Tel: +1 330-577-5199, Email: info@trigaglobal.com

## 1 Description

The TR-FPJ Fire Fighter's Phone Jack and the TR-RHS Fire Fighter's Remote Handset are used with the TR-FFT Fire Fighter's Telephone..

Figure 1.1 shows the Triga, Fire Fighter's Remote Phone Jack.

Figure 2 shows the Triga Fire Fighter's Remote Handset.







Figure 2 TR-RHS Fire Fighter's Remote Hand Set

## 1.1 Compatibility

The TR-FPJ is compatible with the Triga Series, TR-FFT Fire Fighter's Telephone. For additional information, refer to the following Installation Manuals.

Document	Document Part Number
TR-FFT Manual	LS10309-001TR-E

#### 2 Installation

There are two ways to install the TR-FPJ.

- Install the TR-FPJ Fire Fighter's Phone Jack to a single-gang electrical box (4" x 2-1/8" x 2-1/2") or (10.16cm x 5.54cm x 6.35cm).
- When the Addressable Mini-Monitor module is installed with the TR-FPJ Fire Fighter's Phone Jack, use a deep single-gang electrical box (4" x 2-1/8" x 3-1/4") or (10.16cm x 5.54cm x 8.25cm).
  See Figure 3.

# TR-FPJ Fire Fighter's Phone Jack Product Installation Document

PN LS10306-001TR-E:A 04/27/21 ECN: 151608

## 3 Wiring and Setup

Connect and set up the TR-FPJ as shown in Figure 3 and Figure 4. All circuits are power-limited and supervised.

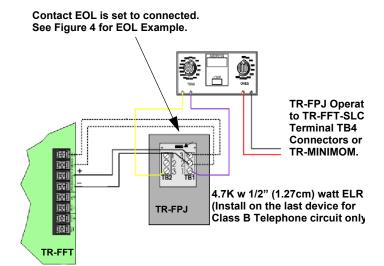


Figure 3 TR-FFT to TR-FPJ Wiring Connections

Figure 4 shows the EOL example.



 


Figure 4 EOL Example

# 4 TR-FPJ Operation

To make a call to the main panel, insert the remote handset plug into the TR-FPJ phone jack.

When the call is complete, remove the remote handset from the jack.